

For this part you will need:

- 4x M8 Nuts
- 4x M8 Washers
- 1x M8x440mm Threaded Rod
- 2x bar-clamp printed pieces

The frame now looks and feels like a frame, but you still have to put on the rod on the bottom that will hold the z-axis in place. When you complete this step, the frame will be all ready to put all the axes on. We won't need any tools for this part. Here's the completed frame you'll end up with:


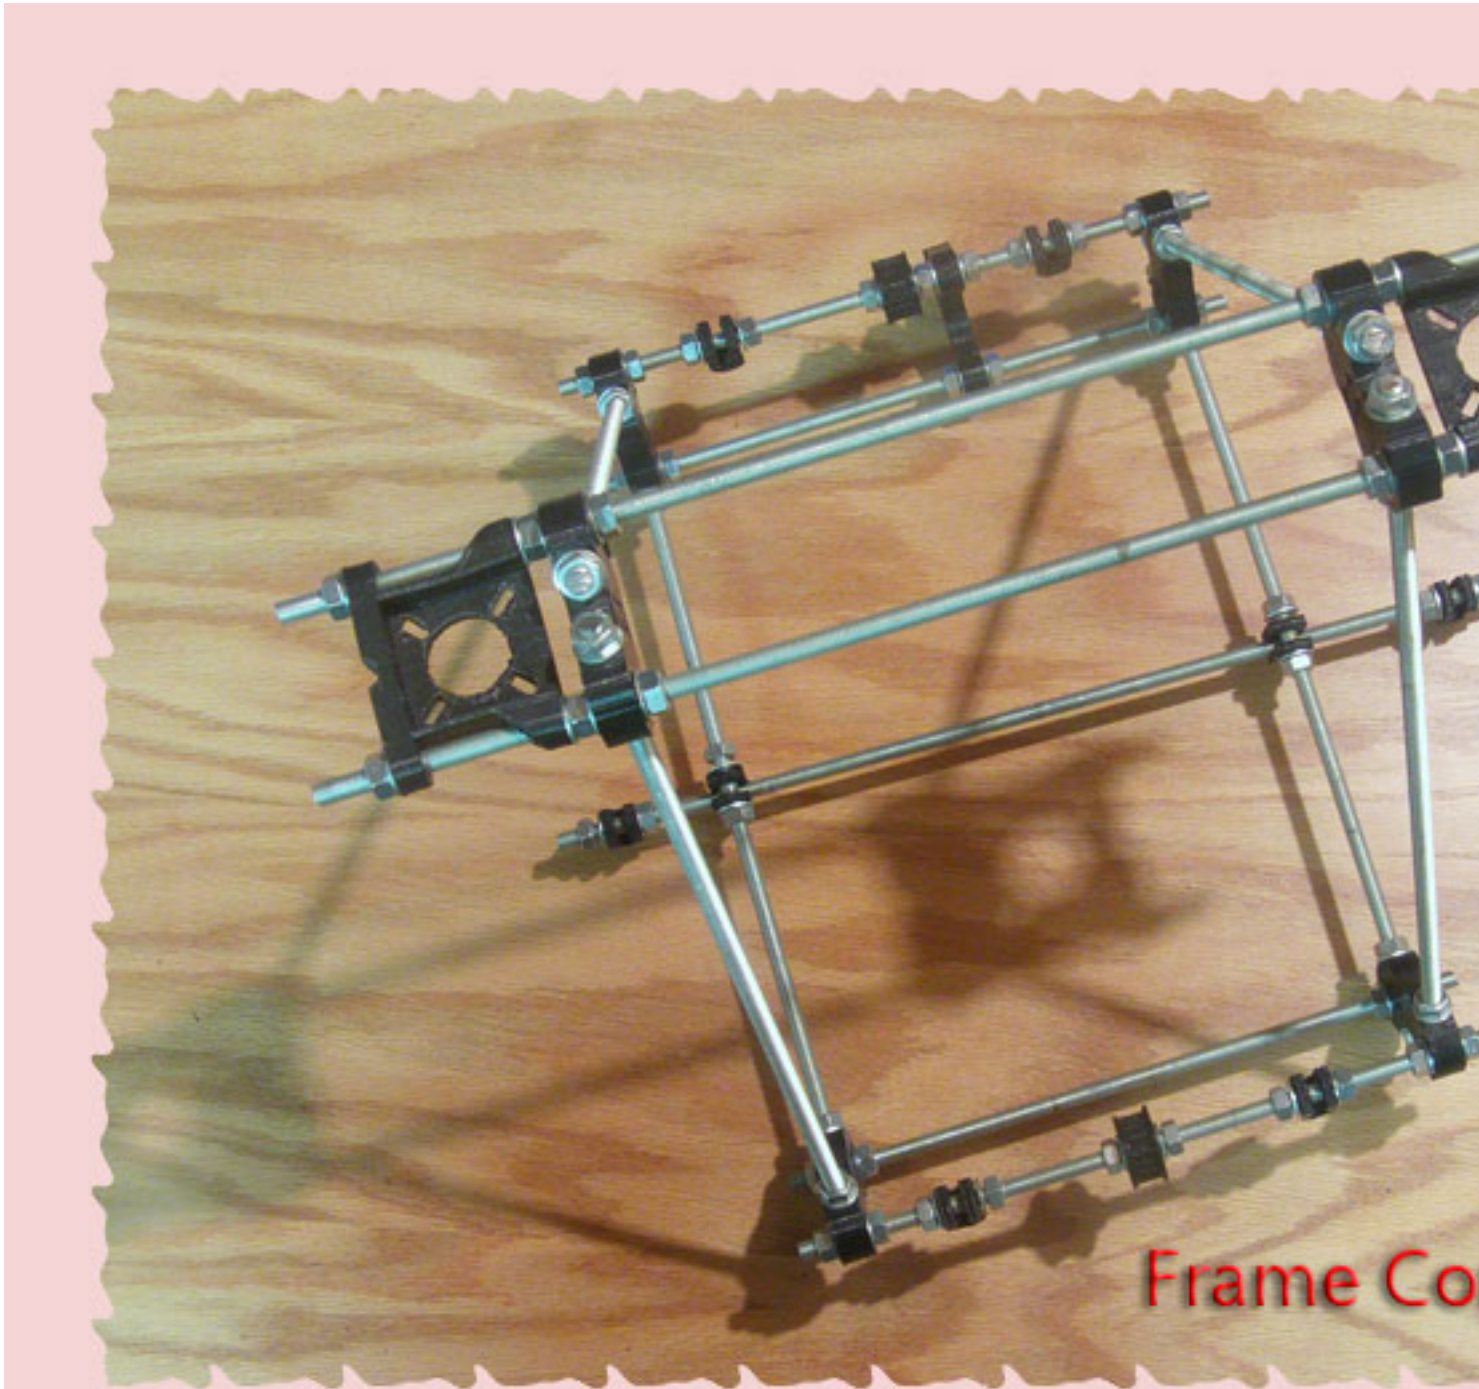


Table 1 and 2 are the Pack 8 and 9. The picture below shows the red and blue plastic frame

Order: 8mm Nut, 8mm Washer, bar-clamp, 8mm Washer, 8mm Nut

Comple

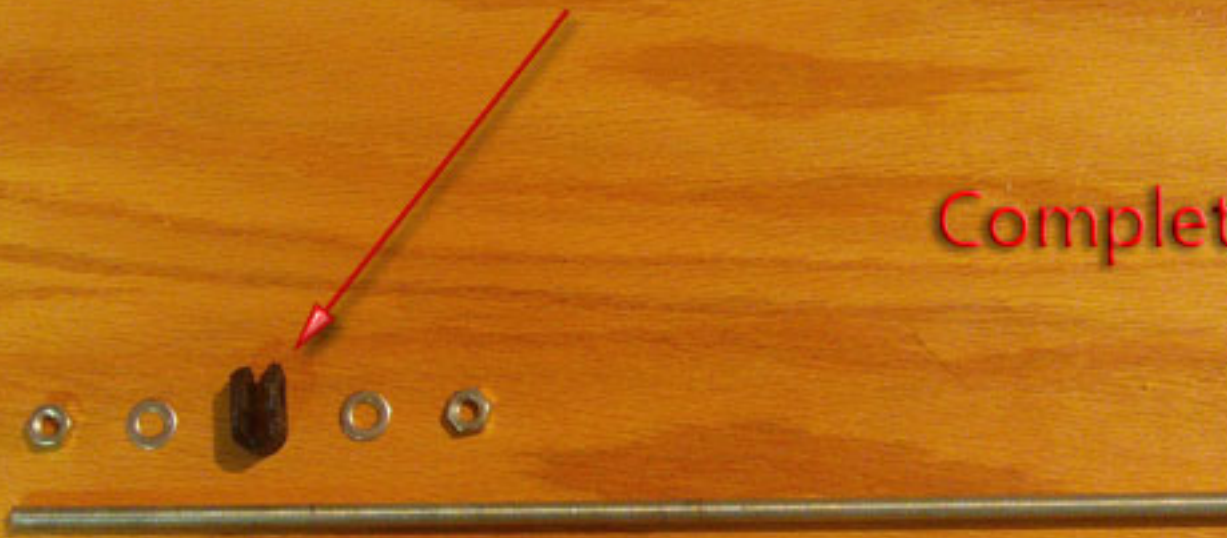

[Copyright © 2015 by All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of the publisher.](#)