


For this part you will need:

- 16x M8 Nuts
- 16x M8 Washers

In this part, you will be putting the front and back parts of the frame that were assembled in the last two parts onto the vertex triangles. We will not want to tighten anything yet, so we shouldn't need any tools for this step. After this step we will start to see the frame coming together, it will look like this:

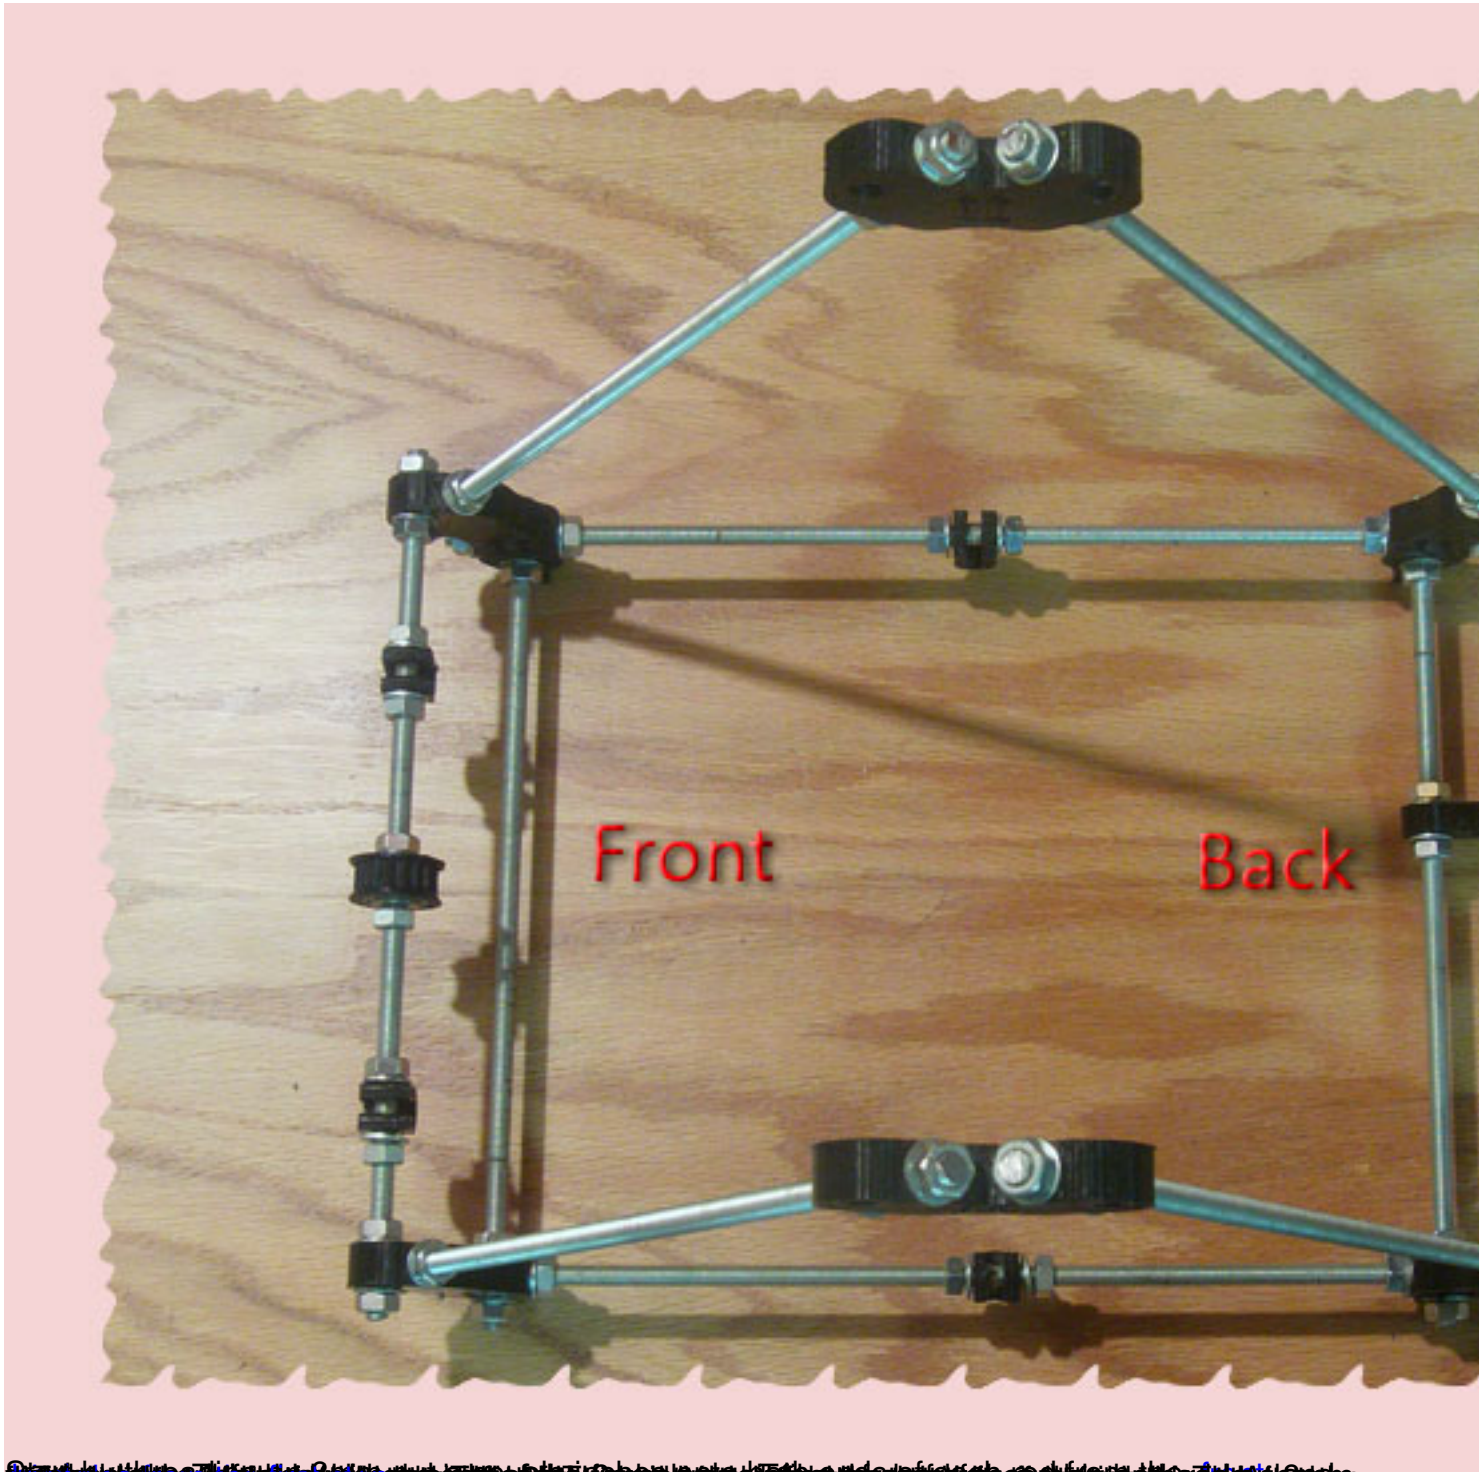

[Return to the top of the page](#) [Return to the bottom of the page](#)

